
# B395 Baseboard Profile

Milled to the UWP gauge. The dimensioned section and part numbers below govern every run. Rev A · 01/01/2026

A 4-1/2" baseboard on a 9/16" ground. It carries 3-1/8" of parallel-sided plain, starting 0" in from the end — that run is the datum and is what the gauge seats on. The template overleaf is there to check a first article against.

PROFILE **B395 · Baseboard** — **4-1/2" × 9/16"**

DIMENSIONED SECTION · BACK FACE UP · PLAIN END LEFT, MOULDED END RIGHT · UNITS: INCHES

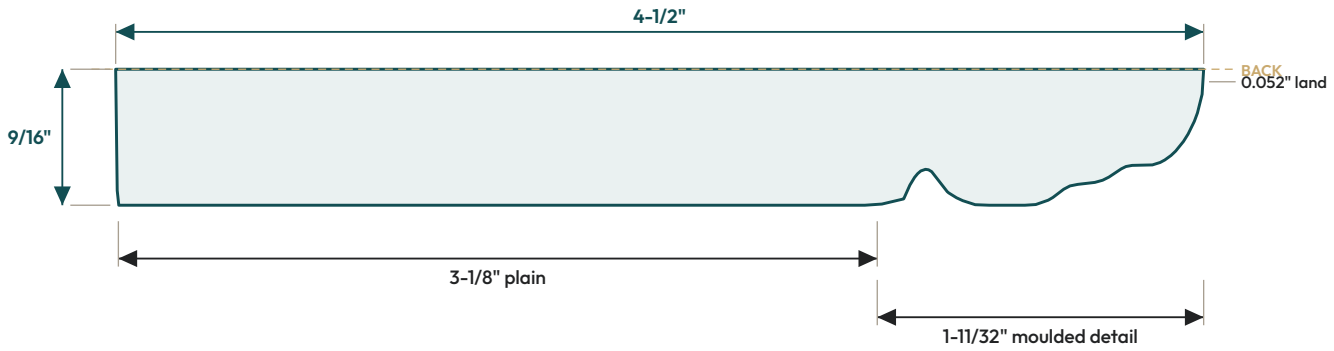


ENLARGED ABOUT 1.3× · SEE PAGE 2 FOR A 1:1 TEMPLATE

**ALL DIMENSIONS ± 1/32"**

Plain run and back face are held — they are drawn from a true 9/16" and are the datum. The detail finishes on a 0.052" land at the far edge and cuts 0.511" deep at most.

| | |
|---|---|
| SIZE | 4-1/2" × 9/16" nominal · sold by the piece, 192" (16') stick |
| STOCKED | Primed FJ Pine · 16' |
| TO ORDER | FJ Pine 1030257 · Solid Pine 1030256 |
| ORDER CODE | B395PR-16 |
| MACHINED DETAIL | Plain run 3-1/8" parallel at 9/16", starting 0" in. Moulded detail 1-11/32" to the top edge, finishing on a 0.052" land. All dimensions ± 1/32". |
| GRADE | Paint grade. Faces clear of open defect; sound pin knots permitted on the back. |
| MOISTURE | Kiln-dried and conditioned to 6–8% MC, checked before moulding. |
| GAUGE / TOLERANCE | Run to the UWP acrylic gauge for B395 · first article plus in-run QC every lot. |

# B395 · 1:1 Check Template

Printed at actual size. Lay a real B395 straight on the outline below. · Rev A · 01/01/2026

**MEASURE THE RULER BELOW BEFORE YOU USE THIS PAGE.**

It must read exactly 3". If it reads short, the printer scaled the page and EVERY dimension on it is short by the same fraction — the outline included. In Acrobat: File > Print > Page Sizing & Handling > "Actual size". Not "Fit", not "Shrink oversized pages". A 3" bar printing 2-7/8" means the page came out at 96%.




THIS RULER MUST MEASURE 3.000" END TO END

B395 CROSS-SECTION · 1:1 · BACK FACE ALONG THE TOP LINE



4-1/2" overall · 9/16" thick · plain end at left, moulded end at right

## HOW TO CHECK A STICK AGAINST THIS

1. Stand the moulding on its end, square to the paper, plain edge on the left-hand end of the outline.
2. The back face and the plain run are the datum. They are drawn from a true 9/16" and should sit dead on.
3. Work along the moulded detail. It should follow the outline closely — any gap you can see is worth marking.
4. Mark any difference on the print and send it back — that is enough to correct the section and recut the gauge.